
# Floating walls

## **ZEBRA BLINDS**

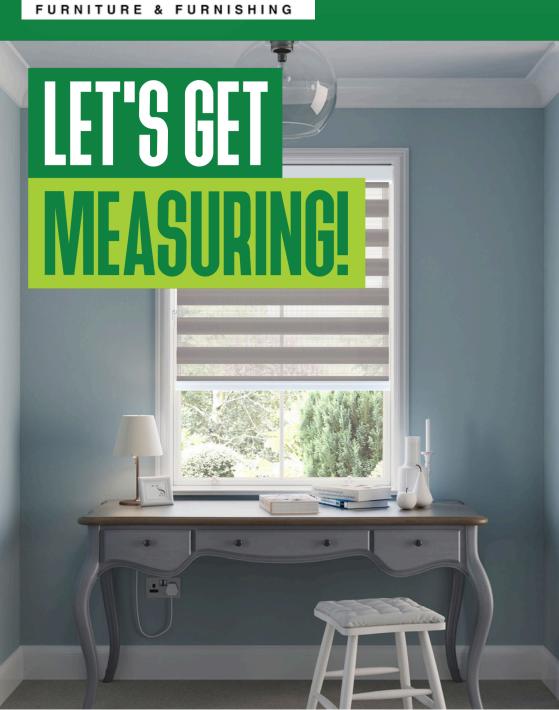


### **MEASURING FOR ZEBRA BLINDS**

#### How do you want the blind to sit against your window?

INSIDE RECESS (We call this RECESS MEASUREMENT): If you want your blinds to mount inside a window recess, this is the option for you. Most people choose this style.

OUTSIDE RECESS (We call this EXACT MEASUREMENT): If you want your blinds to cover the whole window recess, or if your windows are flush with the wall, this is the option for you.

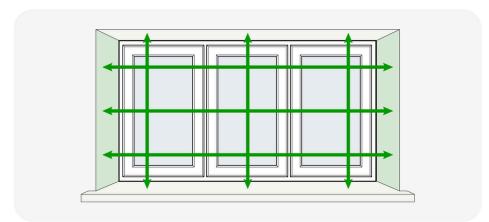

#### **INSIDE RECESS (RECESS)**

#### **STEP 1 - MEASURING WIDTH**


Take 3 measurements across the width of the top, middle and bottom of the recess. The smallest measurement will be your blind width. (We will make your blind 0.5inch narrower for a snug fit.)

#### **STEP 2 - MEASURING DROP**

Take **3 measurements** from the top down, along the left, middle and right of the recess. The **smallest** measurement will be your blind drop.

THAT'S IT! These 2 measurements are all you need for ordering an inside recess blind.

#### **OUTSIDE RECESS (EXACT)**

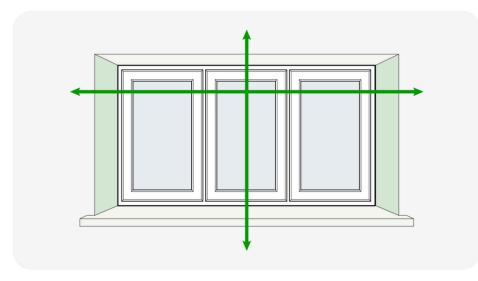

Tip: For the best allow your blind to overlap the edges of the recess by at least 3 Inches on each side - ensuring that you have enough space to accommodate the suggested overlap.

#### **STEP 1 - MEASURING WIDTH**

Measure outside the recess from one side to the other, starting and finishing where you want the edges of your blind. This will be your blind width.

#### **STEP 2 - MEASURING DROP**

Measure from top to bottom, starting where you want the rail to be and ending where you want the bottom of your blind to be. This will be your blind drop.

THAT'S IT! These 2 measurements are all you need for ordering an outside recess blind.

#### MAKE A NOTE OF YOUR MEASUREMENTS

Blind/Colour/Location	Width	Drop	Inside/Outside Recess

Other Notes

