

Floating walls®

FURNITURE & FURNISHING

ROLLER BLINDS

**LET'S GET
MEASURING!**




MEASURING FOR ROLLER BLINDS

How do you want the blind to sit against your window?

INSIDE RECESS (We call this RECESS MEASUREMENT): If you want your blinds to mount inside a window recess, this is the option for you. Most people choose this style.

OUTSIDE RECESS (We call this EXACT MEASUREMENT): If you want your blinds to cover the whole window recess, or if your windows are flush with the wall, this is the option for you.

INSIDE RECESS (RECESS)

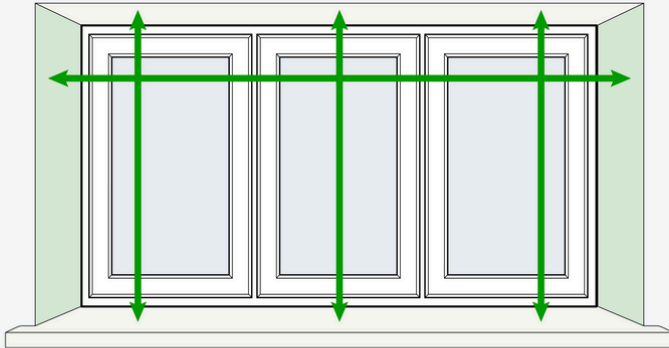

STEP 1 - MEASURING WIDTH


Measure the width of the recess at the top, middle, and bottom. Use the smallest measurement.

STEP 2 - MEASURING DROP

Measure the height of the recess at the left, center, and right. Use the smallest measurement.

We will make deductions to ensure the blind fits perfectly within the recess.

OUTSIDE RECESS (EXACT)

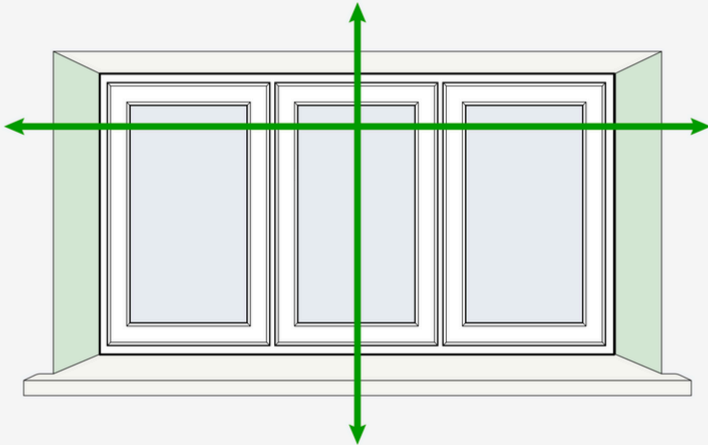

Tip: For the best allow your blind to overlap the edges of the recess by at least 3 Inches on each side - ensuring that you have enough space to accommodate the suggested overlap.

STEP 1 - MEASURING WIDTH

Measure the width of the area you want the blind to cover. Add extra overlap (3 inches) on each side of the window for better coverage.

STEP 2 - MEASURING DROP

Measure from top to bottom of the window and add (4 inches) to both the top and bottom.

Tips for Accuracy

- Use a metal tape measure for precise measurements.
- Double-check all measurements before ordering.
- Note the specific fitting type and measurements clearly when placing your order.

THAT'S IT! These 2 measurements are all you need for ordering an outside recess blind.

MAKE A NOTE OF YOUR MEASUREMENTS

Blind/Colour/Location	Width	Drop	Inside/Outside Recess

Other Notes